



INSTALLATION INSTRUCTIONS:

2006 + TOYOTA FJ CRUISER STEALTH FRONT

Technical Support: roadarmor.com or call (206) 510-8648

Warning!

Read the instructions completely before beginning the installation. Before tightening bolts, drilling or cutting where required, check to make sure that there are no obstructions such as brake, fuel or electrical lines that may be damaged. Also keep in mind this is an aftermarket product and MAY require some minor shimming and or trimming, reaming etc. to fit exactly correctly.

IMPORTANT NOTICE

YOU ARE RECEIVING THIS ROAD ARMOR PRODUCT RAW/UNCOATED.

BE SURE TO INSPECT AND OR TEST FIT YOUR PRODUCT TO ENSURE PROPER FIT AND ADEQUATE SURFACE PREPERATION BEFORE HAVING YOUR PRODUCT COATED, PAINTED, BED LINED, ETC.

ROAD ARMOR WILL NOT BE RESPONSIBLE FOR THE COST OF COATING OF YOUR UNIT IF ANY PROBLEMS WITH FIT OR FINISH ARE NOT NOTED AND ADDRESSED **PRIOR** TO HAVING YOUR PRODUCT COATED.

THANK YOU

OPTIONAL ACCESORIES:

STEALTH

- Any 8000lb to 9500I winch
- lights: 510 PIAA series
- Forged 7/8" Recovery Shackles
- Road Armor's Roller Fairlead License Plate Mount

TOOLS REQUIERED:

- Sockets Set (metric primarily)
- Ratchet
- Wench Set
- Cut off wheel, torch, plasma cutter, sawzall, etc.
- Flat head, phillips head screw driver
- Common sense & patience



INSTRUCTIONS:

STEP 1

Park on level surface, open the hood and disconnect battery.



STEP 2

Looking from the top of the grill remove all the plastic rivets & hardware etc. that hold the grill in place and set the grill aside as shown.



STEP 3

Remove the plastic front bumper shroud as shown.



STEP 4

Now remove the metal plastic shroud holders as shown including cutting off the piece of the lower headlight holder as shown. The lower headlight support can be removed and placed in vice etc. if desired. Figure A.




STEP 4 CONTINUED



STEP 5

Now proceed to remove the stock brackets/inner steel bumper tube = 4 ??? mm nuts per side and retain the 8 stock ??? mm nuts to be reused for the installation of the Road Armor brackets as shown.

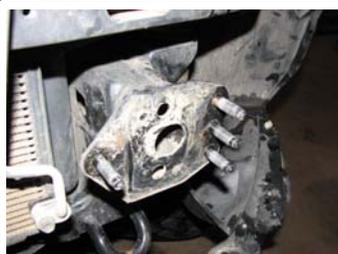

STEP 6

Install the provided Road Armor brackets with 8 stock nuts as shown.




STEP 7

Now install the double bolt plates provided through the inside of the bumper out using the retainer ring clips provided as show.



STEP 8

Now install the metric bolts and spacers provided that will thread into the frame as shown.

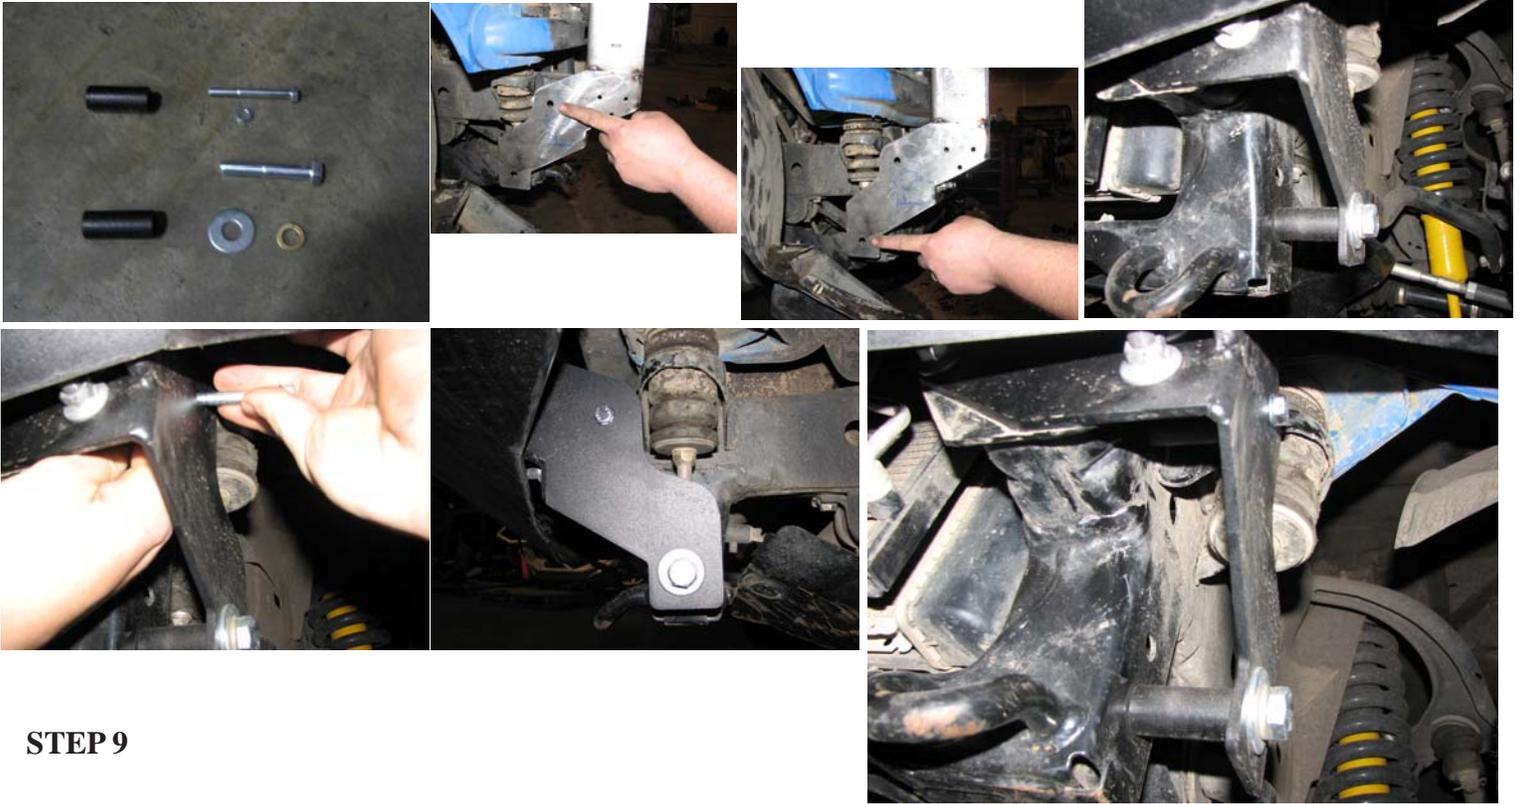

STEP 9

At this time you will install the optional winch and or lights and Road Armor logo etc. according to manufactures instructions (not shown). Also keep in mind that the winch control box installation and location is entirely up to the vehicle owner not Road Armor.

STEP 10

Now lift the Road Armor bumper up to the mounting brackets you have previously installed and secure with the appropriate hardware provided as shown.



STEP 11

Now re-install the factory grill with the saved factory hardware as shown.



STEP 12

Now proceed to make all final adjustments and tighten all hardware as shown.



STEP 13

Lastly cut the inner plastic fender close out to fit the profile of the new Road Armor installed bumper as shown and enjoy your new Road Armor bumper.

